



DELTA 46H Series Bumper Fog/Driving Light Kit Hummer H2 Application


P/N 01-9029-50X

P/N 01-9039-50X

INSTALLATION INSTRUCTION

1. Remove the Front Fascia.
2. Remove both Daytime Running Lights from the Fascia.
3. Trace the attached temple on the back of each back panel as shown in photo #3
4. Cut out plastic material as marked on photo #3 to allow Delta 46H lights to be retrofitted into light housing in the fascia.
5. Repeat this procedure for the other light.
6. Connect ballast to Delta 46H light using waterproof terminal and attach to flat surface of fascia using 2-way adhesive tape.
7. Install relay in a close proximity of the battery.
8. Connect yellow wire leads running from the harness to prong #87 and #87A on the relay
9. Connect Blue wire lead to prong #85 on the relay.
10. Connect short Black wire lead to prong #86 on the relay.
11. Connect red long wire lead to prong #30 on the relay.
12. Using the sheet metal screw (provided) run short ground black wire terminated with ring connector attach relay to the flat surface under the hood.
13. Run blue wire from relay alongside the fire wall and through the rubber grommet which leads factory light harness through the fire wall into passenger compartment.
14. Install switch on the left side of dashboard. Connect the blue wire to switch.
15. Ground the switch to any metal surface under dashboard using the short black wire.
16. Energize the switch by splicing into any hot line under the dash (preferably to low-beam wire).
17. Remove the fuse from the red wire leading from the relay and connect to the positive post on the battery. Now insert the fuse back into the fuse holder.

Now turn on your switch and test your HID lights.

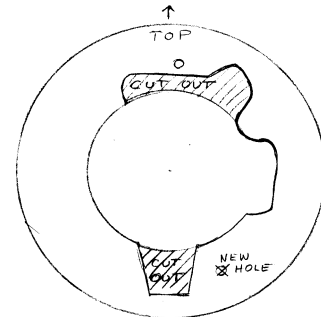

DELTA TECH INDUSTRIES, LLC - Ontario, CA 91761, U.S.A.

Web: www.deltalights.com E-mail: tech@deltalights.com